


# massive


*speed system*

2304 Spring Ridge Dr. Unit A Spring Grove, IL 60081  
**Massive Speed System Ford Focus Toe Arm Installation**

- Make sure car is parked on a level surface with transmission set to park or in gear. Block front tires.
- Raise rear of vehicle, set on jack stands.
- Remove wheels for ease of access.
- Remove “Front lower control arm” as shown in figure 1.
- Loosen jam nuts on new Massive arm. Adjust rod ends so bolt can be slid through original arm and new arm with perfect alignment. Hand tighten jam nuts.
- Using new included hardware, install new arm into original location.
- Torque to 85 Ft lbs. Tighten jam nuts.
- Reinstall wheels, lower vehicle.
- Bring vehicle to competent alignment shop to have them set to stock or our desired toe settings.
- ENJOY!

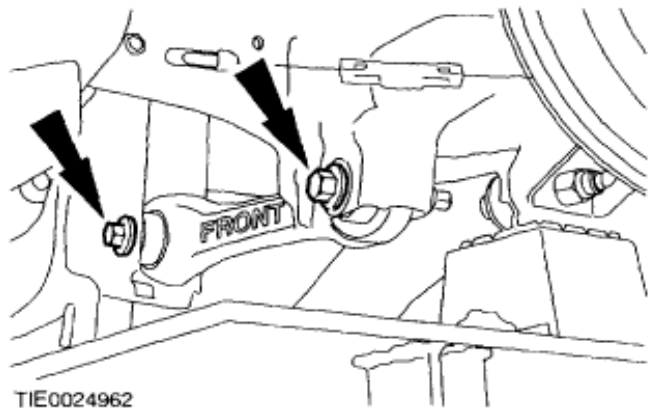

**Fig. 1 Stock arm location**

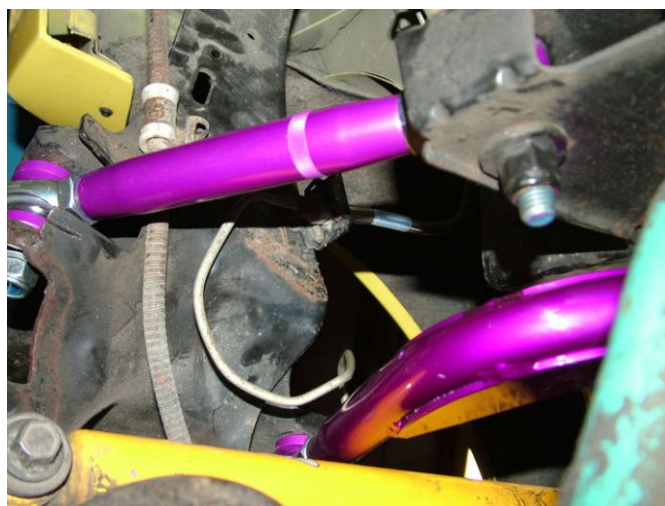

**Fig. 2 New arms installed**

**Massive = Focus Performance Pros!!! Contact us for ANY Focus need!**

**1.815.675.1822**

**[www.massivespeedsystem.com](http://www.massivespeedsystem.com)**