


MAHW'16401 - M8x1.25x16

Massive Speed **PRECISION FASTENERS** pressure plate bolt


- Inspect tapped holes on flywheel, clean and chase threads if necessary
- Apply Thread Locking compound (Loctite) to threads of bolts
- Finger tighten all bolts then slowly tighten in the cross pattern shown
- Final torque to 30 Ft Foot Pounds

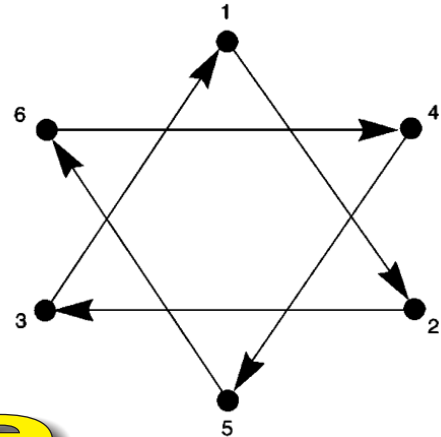

www.massivespeedsystem.com

Massive Speed **PRECISION FASTENERS** pressure plate bolt

- Inspect tapped holes on flywheel, clean and chase threads if necessary
- Apply Thread Locking compound (Loctite) to threads of bolts
- Finger tighten all bolts then slowly tighten in the cross pattern shown
- Final torque to 30 Ft Foot Pounds

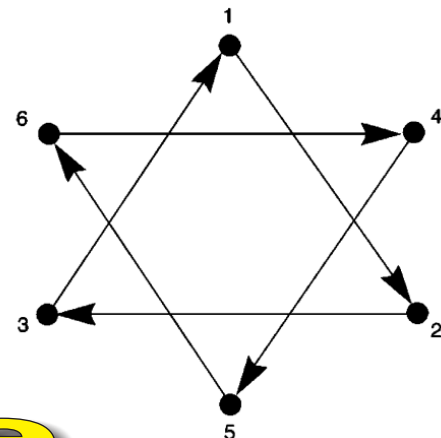

www.massivespeedsystem.com

MAHW'16401 - M8x1.25x16