

2304 Spring Ridge Dr. Unit A Spring Grove, IL 60081

## Massive Speed System Ford Focus 00-up Fog Light Modification Installation



- Make sure car is parked on a level surface with the parking brake engaged.
- Open hood, set prop rod in position
- Locate Fuse box (Fig. 1). Box will open hinging on the left side.
- Locate Relay 13. The diagram on the fuse box lid details its exact location (Fig. 2, shown with jumper already installed). Remove relay, retain for future use or owners.
- Firmly install the Jumper unit across the two terminals denoted in drawing (Fig. 3).
- Close fuse box lid, shut hood.
- Test for foglight operation in all positions: parking lights only, regular headlight, brights. REMEMBER!!! KEYS MUST BE IN IGNITION FOR HEADLIGHTS OR FOGS TO COME ON. Otherwise only the parking lights will come on.
- You can now enjoy use of your factory foglights at any position on your headlight switch!



Fig. 1 Fuse Box Location



Fig. 2 Jumper Installed into R13

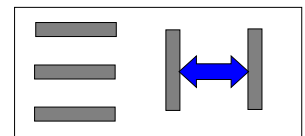


Fig. 3 Relay Socket

**Massive = Focus Performance Pros!!! Contact us for ANY Focus need!**