

2304 Spring Ridge Dr. Unit A Spring Grove, IL 60081

Massive Speed System SRT-4 / PT GT Motor Mount Installation

Upper Mount

- Make sure car is parked on a level surface with the parking brake engaged
- Raise front of vehicle. Always support vehicle with jack stands
- Place floor jack with a suitable soft pad under oil pan with VERY light pressure to support engine
- Remove OE motor mount secured by 2 bolts
- Install new upper mount into OE location
- Hand start bolt in forward position first, then rear
- Utilize supplied upgraded hardware. Stack LARGE OD thick washer on forward most outboard position with a split lock washer. See Fig 3. Torque to 70 ft lbs.



Fig. 1



Fig. 2



Fig. 3

Lower Mount

- Remove Passenger side front wheel
- Remove plastic shroud (Fig 4)
- Remove forward most bolt
- Remove support tube (fig. 6)
- Remove rear stud (this fastener will be reused due to its proprietary nature)
- Remove Dowel Pin (Fig 7) and discard
- Install new mount (see figure 8 for orientation) using supplied new front bolt and large OD flat washer
- Reinstall rear stud
- Torque both to 70 ft lbs
- Reinstall support tube
- Reinstall shroud
- Reinstall Wheel
- Remove jack supporting motor
- Enjoy!



Fig. 4

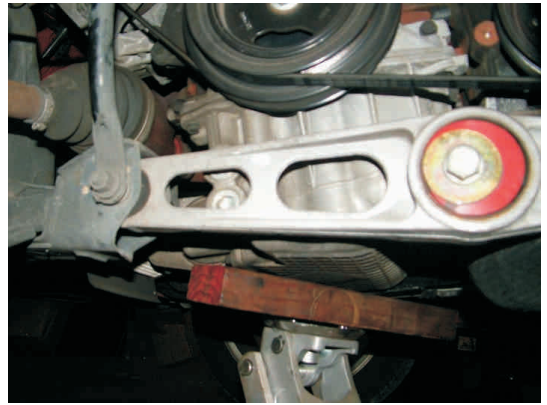


Fig. 5



Fig. 6

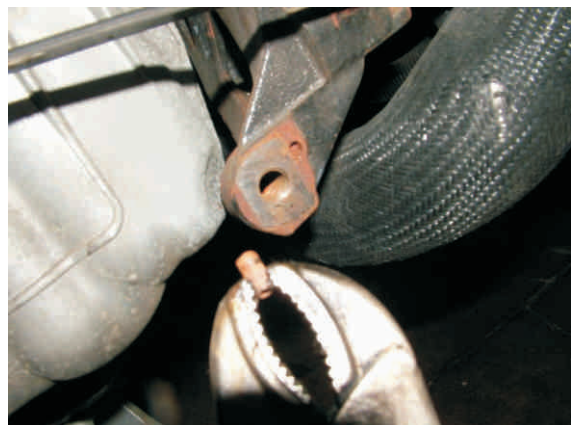


Fig. 7

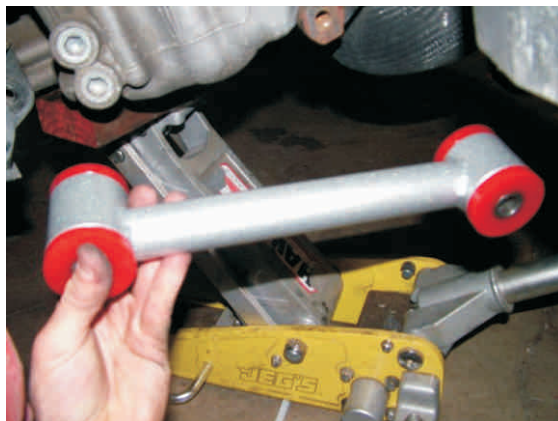


Fig. 8